



Keyless Lock User Instructions

To Lock:

1. Knob & white arrow must be in 12 O'clock and "Unlock" position.
2. Spin dials to set a 1-4 number combination.
3. Turn knob to 9 O'clock and "LOCK" position.
4. Spin dials to scramble combination.

To Unlock:

1. Spin dials to preset combination.
2. Turn knob to "UNLOCK" position.
3. Leave knob in "UNLOCK" position and scramble your combination for next user.



Keyless Lock Master Key Instructions

1. Insert master Key.
2. Turn knob and white arrow to 12 O'Clock and "UNLOCK" position.
3. Spin each dial until they stop; all 4 dials will stop at last preset combination.
4. Turn knob back to 9 O'clock and "LOCK" position and remove key.
5. Return knob back to "UNLOCK" position for next user/combination.